

IMPORTANT SAFETY RECALL NOTICE

VOLUNTARY RECALL OF RYOBI 40 VOLT BRUSHLESS 21" CORDLESS WALK-BEHIND MOWERS

Sold at Home Depot from February 2021 through January 2025



Location of Model Number and Serial Number

Model Numbers

RY401014BTLUS, RY401014US, RY401140US, RY401015BTLUS, RY401015US, RY401150US, RY401140US-Y, RY401150US-Y, RY401160US, and RY401016US

Serial Numbers

KC21032D010001 - KC21327N999999

A push-on connector inside the powerhead can overheat, posing a fire hazard.

Consumers should immediately discontinue use of the product and contact Ryobi Customer Service for instructions on how to disable the recalled mower and receive a free replacement 21" walk-behind mower.

If you have any questions or require additional information, please contact Ryobi Customer Service at **1-800-597-9624 from 9 a.m. to 5 p.m. ET or visit **www.ryobitools.com**.**

THD SKU #	Model Number	Internet #	UPC	Product Description
1005788802	RY401140	314600837	046396036995	40V HP Brushless 21 in. Cordless Battery Walk Behind Self-Propelled Lawn Mower with (2) 6.0 Ah Batteries and Charger
1005788757	RY401150	314428494	046396036711	40V HP Brushless 21 in. Cordless Battery Walk Behind Multi-Blade Self-Propelled Mower - (2) 6.0 Ah Batteries & Charger
1006138337	RY401140US-Y	316100563	046396038036	Ryobi 40V BL 21in Comp Deck SP Mower
1008905142	RY401015BTL	322882121	046396045676	40-Volt HP Brushless 21 in. Cordless Battery Walk Behind Dual-Blade Self-Propelled Mower (Tool Only)
1006128793	RY401200	316066510	046396037589	40V HP Brushless 21 in. Battery Walk Behind Multi-Blade Push Lawn Mower with 7.5 Ah Battery and Rapid Charger
1008905145	RY401014BTL	322882402	046396045669	40-Volt HP Brushless 21 in. Cordless Battery Walk Behind Self-Propelled Lawn Mower (Tool Only)
1006138706	RY401150US-Y	316101830	046396038043	40V HP Brushless 21 in. Cordless Battery Walk Behind Multi-Blade Self-Propelled Mower - (2) 6.0 Ah Batteries & Charger
1006388344	RY401140US RY401150US			
1012055614	RY401150US- RY40HPST01B	330950173	046396054814	40-Volt HP Brushless 21 in. Cordless Walk Behind Multi-Blade Self-Propelled Mower & Trimmer - 2 Batteries and 2 Chargers
1009480637	RY401140-4X	316348828	046396038630	40V HP Brushless 21 in. Cordless Walk Behind Self-Propelled Lawn Mower & Trimmer - (3) Batteries/(2) Rapid Chargers
1009479285	RY401150-2X	318494147	046396041463	40V HP Brushless 21 in. Cordless Battery Walk Behind Dual-Blade Self-Propelled Mower & Blower - (2) Batteries & Charger
1006215341	RY401150-CMB1	316348782	046396038654	40V HP Brushless 21 in. Battery Walk Behind 2-Blade Self-Propelled Lawn Mower/Trimmer/Chainsaw/Hedge/Blower- 4 Batteries
1006215343	RY401140-CMB1	316348870	046396038661	40V HP Brushless 21 in. Cordless Walk Behind Self-Propelled Mower/Trimmer/Chainsaw/Hedge/Blower 4 Batteries/Chargers
1009479286	RY401140-2X	318493576	046396041456	40V HP Brushless 21 in. Cordless Battery Walk Behind Self-Propelled Lawn Mower & Blower (2) 6.0 Ah Batteries and Charger
1006801132	RY401140-3X	318493828	046396041524	40V HP Brushless 21 in. Cordless Battery Walk Behind Self-Propelled Lawn Mower, Trimmer, Blower (4) Batteries & Charger
1012501447	RY401140-ACLS01	332047588	046396055255	40V HP Brushless 21 in Cordless Walk Behind Self-Propelled Lawn Mower & Lawn Striper w/(2) 6.0 Ah Batteries and Charger
1006407809	RY401150-4X	316774393	046396038647	40V HP Brushless 21 in. Battery Walk Behind Dual-Blade Self-Propelled Mower &String Trimmer - (3) Batteries/(2) Chargers
1007577422	RY401140US- AC04313	320188187	046396044549	40V HP Brushless 21 in. Cordless Battery Walk Behind Self-Propelled Mower with (2) Batteries, Charger, Lawn & Leaf Bag
1006801402	RY401150US-3X	318494046	046396041531	40V HP Brushless 21" Cordless Battery Walk Behind Dual-Blade Self-Propelled Mower, Trimmer, Blower, Batteries, Charger
1012632555	RY401140US- RY40HPST01B	330903698	046396054784	40V HP Brushless 21 in. Cordless Walk Behind Self-Propelled Lawn Mower & Trimmer with (2) 6.0 Ah Batteries and Charger