



## SAFETY RECALL NOTICE FOR THE HOME DEPOT

DEWALT IS RECALLING BATTERY OPERATED PUSH & SELF-PROPELLED WALK BEHIND MOWERS, MODEL YEAR 2024:



DCMWP234U2

SCAN QR CODE TO  
GET A FREE REPAIR



DW US-EN



DCMWSP256U2

THD SKU #	Internet #	Model	Description
1010014644	326465401	DCMWSP256U2	20V MAX 21 in. Brushless Cordless Battery Powered Self Propelled Lawn Mower Kit with (2) 10 Ah Batteries & Chargers
1010014318	326465227	DCMWP234U2	20V MAX 21 in. Brushless Cordless Battery Powered Push Lawn Mower Kit with (2) 10 Ah Batteries & Chargers
1012091888	331100345	DCMWSP256U2-W92	20V MAX 21 in. Brushless Cordless Battery Powered Self Propelled Lawn Mower Kit and String Trimmer w/ (2) 10Ah Batteries
1012091874	331100259	DCMWP234U2-W922	20V MAX 21 in. Brushless Cordless Battery Powered Push Lawn Mower Kit and Foldable String Trimmer w/ (2) 10Ah Batteries

**IF WATER GETS INTO THE MOWER'S HANDLE SUPPORT WHILE THE BATTERY IS INSTALLED, THE MOWER CAN FAIL TO SHUT OFF WHEN THE BAIL HANDLE IS RELEASED OR START WITHOUT A KEY, POSING A LACERATION HAZARD TO THE USER.**

Only model numbers DCMWP234U2 and DCMWSP256U2 with date codes 2023 32 through 2024 13 are affected. The model number is printed on the black model plate on the rear door of the mower. The date code is printed on the left side of mower above the rear wheel. Mowers manufactured after March 2024 (2024 14-58) are not affected.

**IF YOUR MOWER IS AFFECTED, STOP USING YOUR MOWER IMMEDIATELY IF IT HAS GOTTEN WET.  
DO NOT GET YOUR MOWER WET AND DISCONNECT YOUR BATTERY WHEN THE MOWER IS NOT IN USE.**

Contact DEWALT to obtain a free repair at an authorized service center through *one* of the following options:

- Scan the **QR code** above
- Go to: [dewalt.com/push-mowers-recall](https://dewalt.com/push-mowers-recall)
- Call toll free **1-800-990-6421**, 8 a.m.-6 p.m. ET, M-F